## Procedure for confirming that the portable SSD is locked with password protection function

To ensure that your EXCERIA PLUS G2 Portable SSD or EXCERIA PLUS Portable SSD is password protected by SSD Utility, please follow the steps below.

## How to confirm password protection on EXCERIA PLUS G2 Portable SSD

1, Safely remove the EXCERIA PLUS G2 Portable SSD from your computer.



2, Execute the SSD Utility on your computer.

All apps	< Back
📴 Duillaire & Casuai Garries	

3, Connect the EXCERIA PLUS G2 Portable SSD to your computer.

4, If the SSD Utility recognizes your EXCERIA PLUS G2 Portable SSD and a black shield icon appears, the device is locked by password protection.

SSD UT	ILITY			KIOXIA
lisk 1: KIOXIA-EXCERI	IA PLUS G2 Portable SSD			
Summary	Firmware Update	SMART	Alerts	\$SD Details
Security	Secure Erase			
assword Protection			0	
ease enter your password.				
ease enter your password. you have forgotten your password is will erase all your data.	d, you can reset the device using revert from th	he Secure Erase tab, but		
asse enter your password. you have forgotten your passworr is will erase all your data. Passwo	d, you can reset the device using revert from th	he Secure Erase tab, but		KION
asse enter your password. you have forgotten your password is will erase all your data. Passwo	d, you can reset the device using revert from the device using revert from the device using revert from the device device.	he Secure Erase tab, but		KIOXIA
asse enter your password. you have forgotten your password is will erase all your data. Passwo	d, you can react the device using revert from the second	he Secure Erase tab, but		KIOXIA
aase minyour pasavorot. You have foroclanyour pasavor is will orase all your data. Passwo	d, you can react the device using revert from th vrd Unlock device	he Secure Erase fab, but		KIOXIA
aana minyoo passovora. Yoo haxe forgeboo is will erose all your dats. Passwo	d, you can react the device using revert from th rd Unlock device	he Secure Erase tab, but		KIOXIA
aase einer Jour password. Jour Anve forgoten your password ats. Is will ornae all your dats. Passwo	d, you can react the device using revert from th rrdUnlock device	he Secure Erase fab, but	Senal	
aas eiler your password. In well erase all your dats. Passwo	d, you can react the device using revert from H ord Unlock device	he Secure Erase fab, but	Senal	

If the black shield icon does not appear here, select "KIOXIA-EXCERIA PLUS G2 Portable SSD" and select "Security" tab. If "Remove Password" button appears even though you have not "Unlocked the device" as shown below, the password protection may not be set correctly. In this case, please click the "Remove Password" button to remove the passwords, and then try "Set Password" again.

				- 0
SSD UTI	LITY	YY	N'	KIOXIA
Disk 1: KIOXIA-EXCERIA	PLUS G2 Portable SSD			
Summary Security	Firmware Update Secure Erase	SMART	Alerts	\$ \$D Details
			0	
			the second se	KIOXIA
If you would like to change your pass	word, please click the button below.			AIXOIN
f you would like to change your peas	word, please click the button below. Change Password			KIOXIA
f you would like to change your pass	word, please click the button below.		Se	
If you would like to change your pass	word, please click the button below. Changle Password word, please click the button below. Remove Password	•	Se	KIOXIA

If none of the above is the case, please contact our support office. https://personal.kioxia.com/support

## How to confirm password protection on EXCERIA PLUS Portable SSD

1, Safely remove the EXCERIA PLUS Portable SSD from your PC.



2, Execute the SSD Utility on your PC.

All apps	< Back
Ta Solitaire & Casual Garries	

- 3, Connect the EXCERIA PLUS Portable SSD to your PC.
- 4, If the SSD Utility recognizes the EXCERIA PLUS Portable SSD and a black shield icon appears, the device is locked by password protection.

10 46	ILITY	TY			KIOXI
1: KIOXIA-EXCER	IA PLUS Portable SSD				
Summary	Firmware Update	SMART		Alerts	SSD Details
Security	Secure Erase				
uord Drotoction			$\bigcirc$		
word i rotection					
nter user password					
nter user password.	sword, you can remove the passwords using	the master pass word.			
nter user password.	sword, you can remove the passwords using	the master password.			AL
nter user password. vve forgotten your user pas Passwo	sword, you can remove the passwords using	the master password.			ROOMA
nter user password. Ive forgotten your user pas	sword, you can remove the passwords using ord Unlock device	the master password.	Ì		RIOMA
nter user password. Ive forgotten your user pas	sword, you can remove the passwords using ord Unlock device	the master password.			HOMA

If the black shield icon does not appear, select "KIOXIA-EXCERIA PLUS Portable SSD" and select the "Security" tab. If the "Remove Password" button appears even though you have not "Unlocked the device" as shown below, the password protection may not be set correctly. In this case, please click the "Remove Password" button to remove the passwords, and then try "Set Password" again.

Summary	Firmware Update	SMART	Alerts	SSD Details
Security	Secure Erase			
word Protection			$\Psi$	
ortable SSD is password pro	tected.	1		
				10th
				A

If none of the above is the case, please contact our support office.

https://personal.kioxia.com/support

<End of document>